

Lamp_Replacement_RLHF



FOTO 1



FOTO 2



FOTO 3



FOTO 4

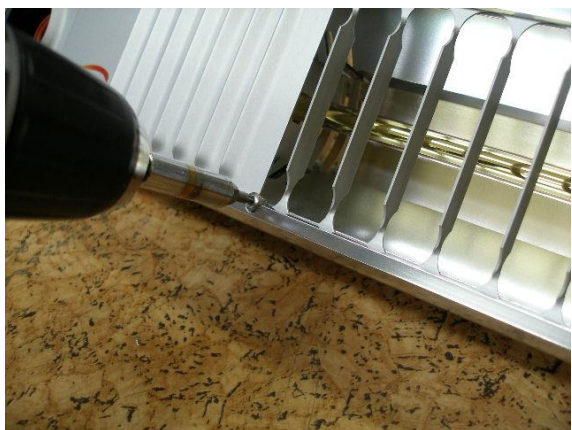


FOTO 5



FOTO 6

Lamp_Replacement_RLHF



FOTO 7



FOTO 8



FOTO 9



FOTO 10

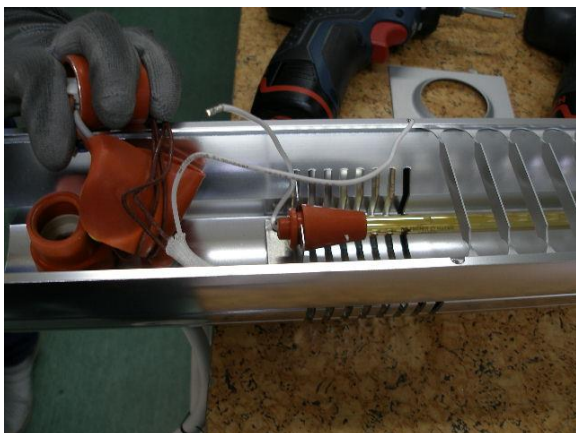


FOTO 11



FOTO 12

Lamp_Replacement_RLHF



FOTO 13



FOTO 14



FOTO 15

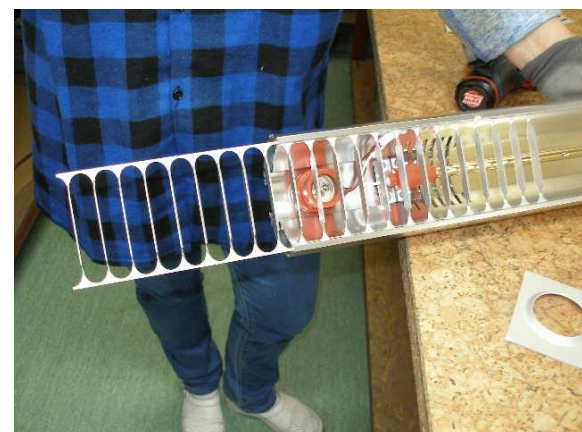


FOTO 16

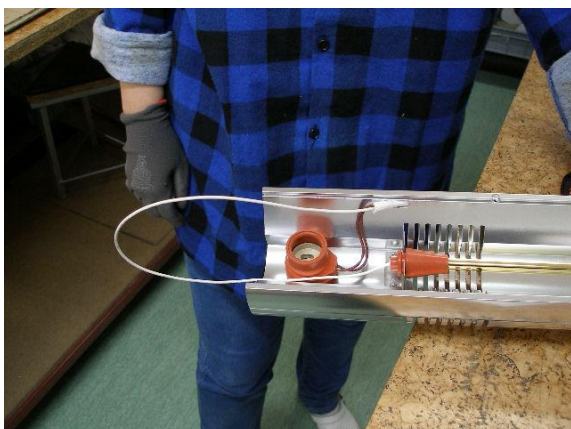


FOTO 17



FOTO 18

Lamp_Replacement_RLHF



FOTO 19



FOTO 20

FOTO INSTRUCTIONS OF REPLACING of an EMITTER IN HEATER **RLH... FIXRLH...**

1. Dismounted a roof from the housing of the heater
2. Dismount the first halogen element
3. Dismount the second halogen element.
4. Dismount the side part at the side of the glued logo
5. Screw out a tap bolt from the housing – between a ventilation plate and a guard.
6. Dismount the plate with a hole.
7. Dismount the ventilation plate with a logo
8. Dismount a covering plate
9. Dismount carefully a silicone sealing tube
10. Disconnect white wires of the emitter from a connecting cube
11. Pull out wires through holes in the tube.
12. Dismount the second side part of the heater.
13. Dismount the plate with a hole
14. Screw out a tap bolt from the housing – between a ventilation plate and a guard
15. Dismount the second ventilation plate.
16. Dismount the guard
17. Pull out the longer wire of an emitter from a canal in the housing
18. Take off an emitter from holders.
19. Carefully dismount a sealing from the emitter
20. Prepare a new emitter for replacing the dismantled one (draw your attention to the length of wires of the new emitter - should be 12 cm and 26 cm)

Assembly of a new emitter make in reverse order.