

Photo instructions of emitter replacement for URCACS01544V9005



1. Heater ready for replacing an emitter




2. Unscrew and dismount a bracket hinge



3. Dismount a side cover




4. Dismount a front cover with a logo

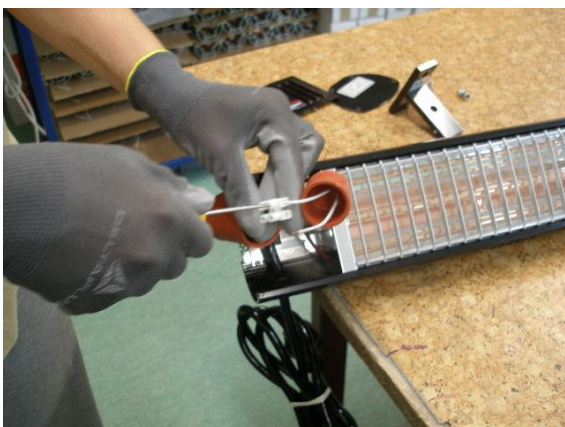

5. Disconnect wires and separate a tube



6. Disconnect a second side cover

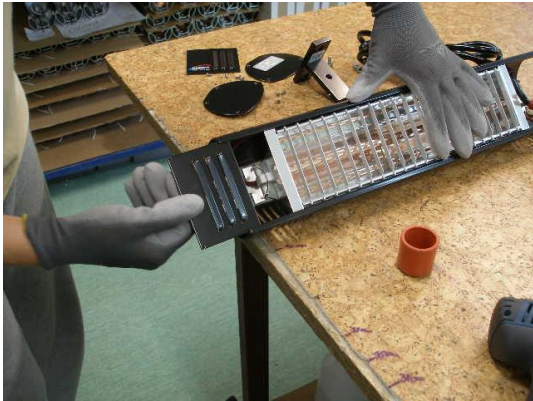

7. Dismount a second side cover



8. Dismount a spring holding the emitters



9. Dismount a spring at the second side



10. Turn a cap of the emitter



11. Take out the faulty emitter from the housing and replace it with a new one.

After replacing refit the new emitter in reverse order