

FOTO-MANUAL OF REPLACEMENT OF EMITTER in MODEL : **URCJ330V, URCJ400V**



1.unscrew the side part



2.unscrew a protection screw




3. unscrew a protection screw




4. unscrew a protection screw



5. disassemble the ventilation cover (logo)

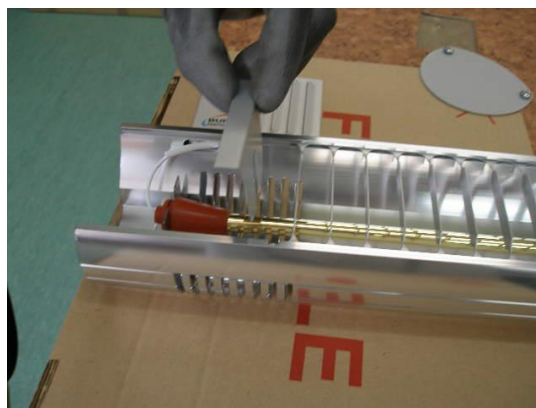


6. disassemble a cover of emitter

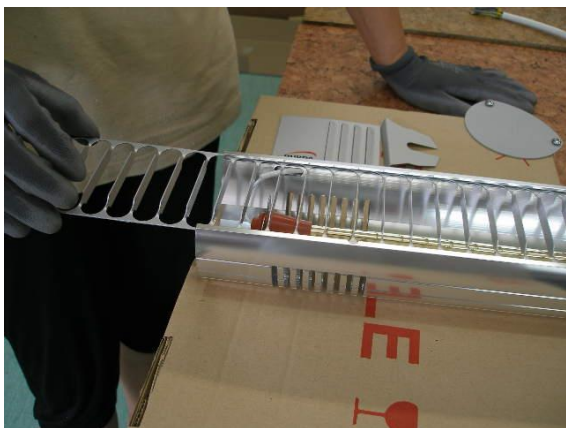


7. disassemble the grill



8. disassemble the middle cover

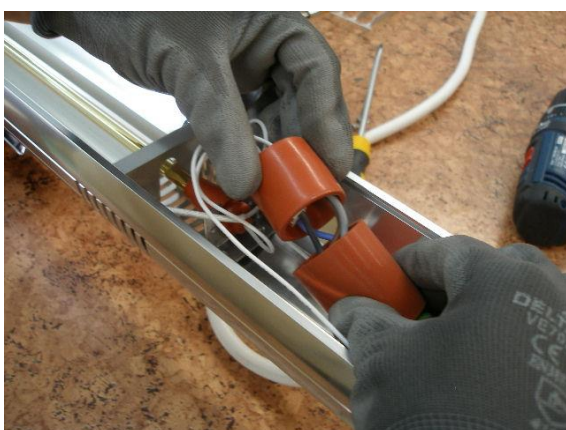


9. disassemble a tube

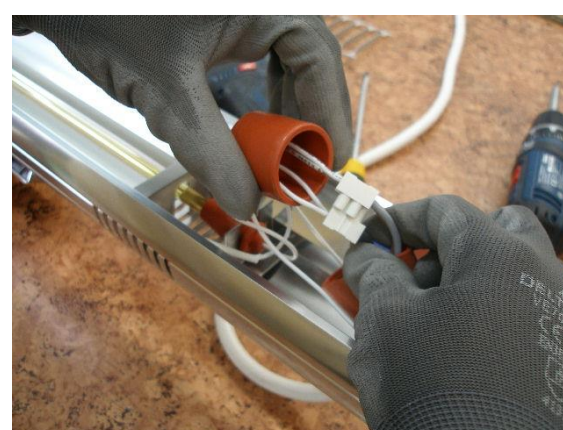

10. take out electric cubes from a tube



11. disassemble the emitters' cables

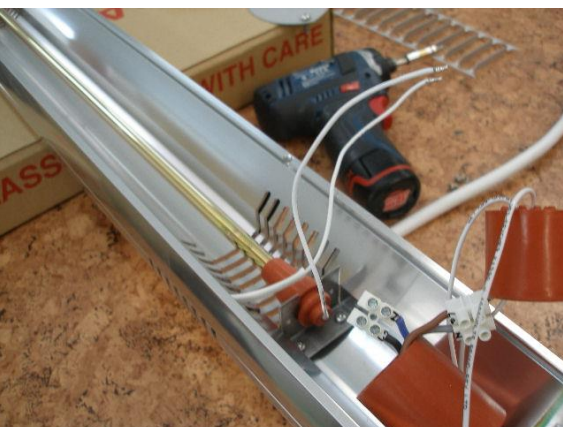

12. disassemble the failed emitter from a heater

Replace the failed emitter with a new one. Reassembly - in reverse order